

DTC	P0A0D-351	High Voltage System Inter-Lock Circuit High
-----	-----------	---


DESCRIPTION

A short pin for the interlock switch is provided on the service plug grip and the inverter cover. Therefore, the interlock signal line circuit opens when the service plug grip or the inverter cover is removed.

If the HV control ECU detects an open circuit in the interlock signal line while the vehicle is in motion (vehicle speed above 3 mph [5 km/h]), it stores the information (INF) code 351 in its memory and alerts the driver.

While the vehicle is in motion, the HV control ECU will not shut down the high-voltage system even if an open circuit in the interlock system is detected.

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P0A0D	351	Open in interlock signal circuit while vehicle is running	<ul style="list-style-type: none"> Wire harness or connector Battery plug (No. 2 interlock switch) Inverter with converter assembly (No. 1 interlock switch)

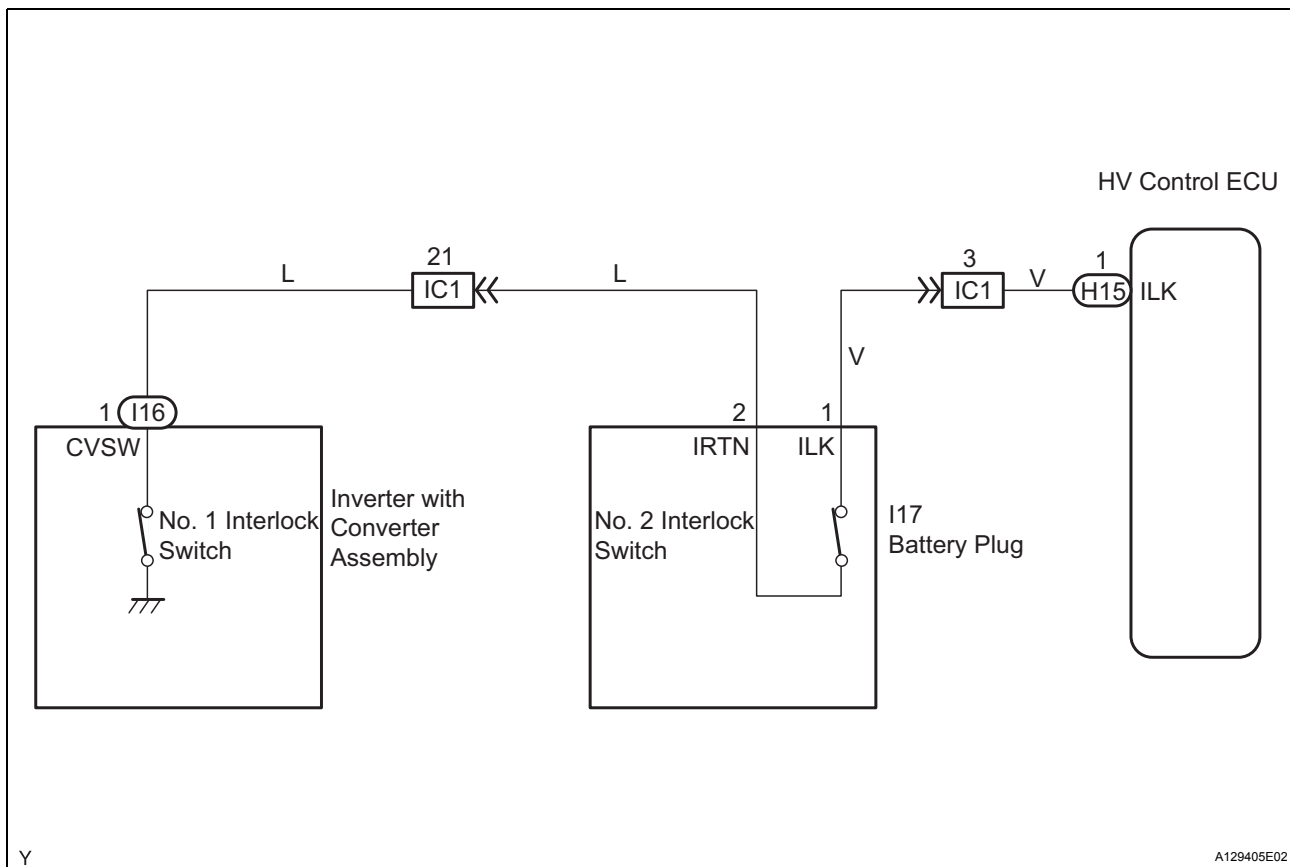WIRING DIAGRAM

INSPECTION PROCEDURE

CAUTION:

- Before inspecting the high-voltage system, take safety precautions to prevent electrical shocks, such as wearing insulated gloves and removing the service plug grip. After removing the service plug grip, put it in your pocket to prevent other technicians from reconnecting it while you are servicing the high-voltage system.
- After disconnecting the service plug grip, wait for at least 5 minutes before touching any of the high-voltage connectors or terminals.

HINT:

At least 5 minutes are required to discharge the high-voltage condenser inside the inverter.

1 CHECK INVERTER COVER INSTALLATION

- (a) Check that the inverter cover has been installed properly.

Standard:



The inverter cover has been installed properly

NG

CORRECTLY REINSTALL

OK

2 CHECK HARNESS AND CONNECTOR (HYBRID VEHICLE CONTROL ECU - NO. 2 INTERLOCK SWITCH)

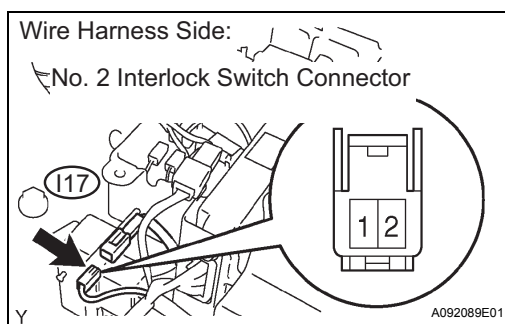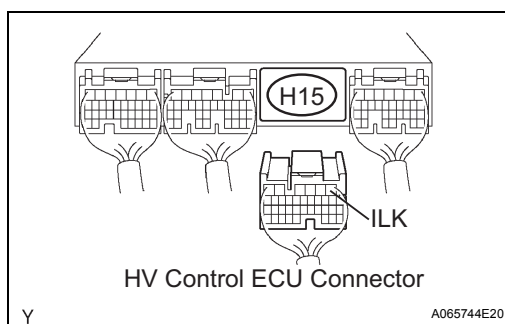

- (a) Disconnect the H15 HV control ECU connector.

- (b) Disconnect the I17 No. 2 interlock switch connector.
(c) Measure the resistance between the wire harness side connectors.

Standard resistance (Check for open)

Tester Connection	Specified Condition
ILK (H15-1) - ILK (I17-1)	Below 1 Ω

Standard resistance (Check for short)

Tester Connection	Specified Condition
ILK (H15-1) or ILK (I17-1) - Body ground	10 k Ω or higher

- (d) Reconnect the No. 2 interlock switch connector.
(e) Reconnect the HV control ECU connector.

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

HV

3**CHECK HARNESS AND CONNECTOR (NO. 1 INTERLOCK SWITCH - NO. 2 INTERLOCK SWITCH)****CAUTION:**



Wear insulated gloves before performing the following operation.

- (a) Turn the power switch OFF.
- (b) Remove the service plug grip (see page [HB-153](#)).

NOTICE:

Turning the power switch ON (READY) with the service plug grip removed could cause malfunction. Therefore, never turn the power switch ON (READY) in this state.

- (c) Remove the inverter cover (see page [HV-531](#)).
- (d) Disconnect the I16 No. 1 interlock switch connector.

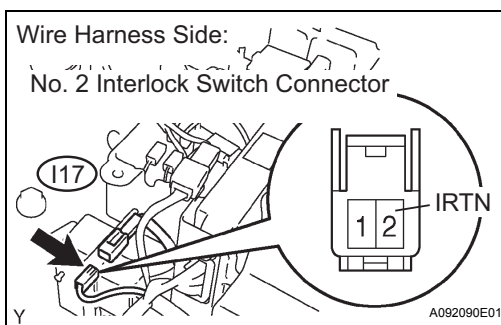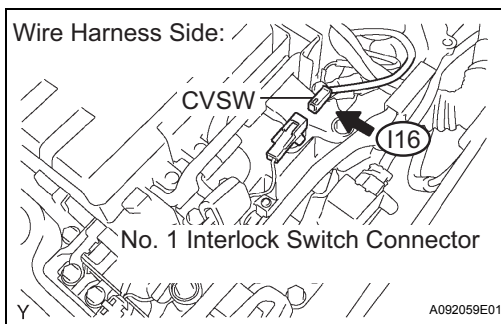

- (e) Disconnect the I17 No. 2 interlock switch connector.
- (f) Measure the resistance between the wire harness side connectors.

Standard resistance (Check for open)

Tester Connection	Specified Condition
CVSW (I16-1) - IRTN (I17-2)	Below 1 Ω

Standard resistance (Check for short)

Tester Connection	Specified Condition
CVSW (I16-1) or IRTN (I17-2) - Body ground	10 k Ω or higher

- (g) Reconnect the No. 1 interlock switch connector.
- (h) Reconnect the No. 2 interlock switch connector.


NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK**4****INSPECT INVERTER WITH CONVERTER ASSEMBLY****CAUTION:**

Wear insulated gloves before performing the following operation.

- (a) Check that the service plug grip and inverter cover have been removed.

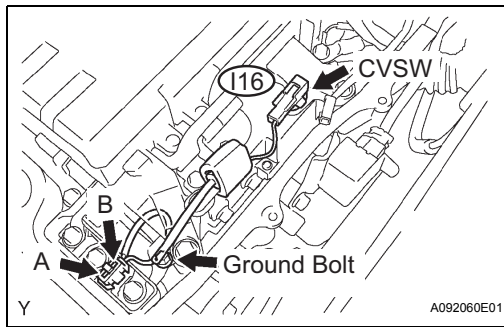

- (b) Disconnect the I16 No. 1 interlock switch connector.
(c) Check that the ground bolt for the interlock switch is tightened to the specified torque.

Torque: 8.0 N*m (82 kgf*cm, 71 in.*lbf)

- (d) Connect terminals A and B as shown in the illustration.
(e) Measure the resistance between the I16 No. 1 interlock switch connector and body ground.

Standard resistance

Tester Connection	Specified Condition
CVSW (I16-1) - Body ground	Below 1 Ω

- (f) Reconnect the No. 1 interlock switch connector.
(g) Reinstall the inverter cover (see page [HV-538](#)).
(h) Reinstall the service plug grip (see page [HB-154](#)).

NG

**REPAIR HARNESS OR CONNECTOR, OR
REPLACE INVERTER WITH CONVERTER
ASSEMBLY**

OK

REPLACE BATTERY PLUG